


Wall Light Assembly Instruction

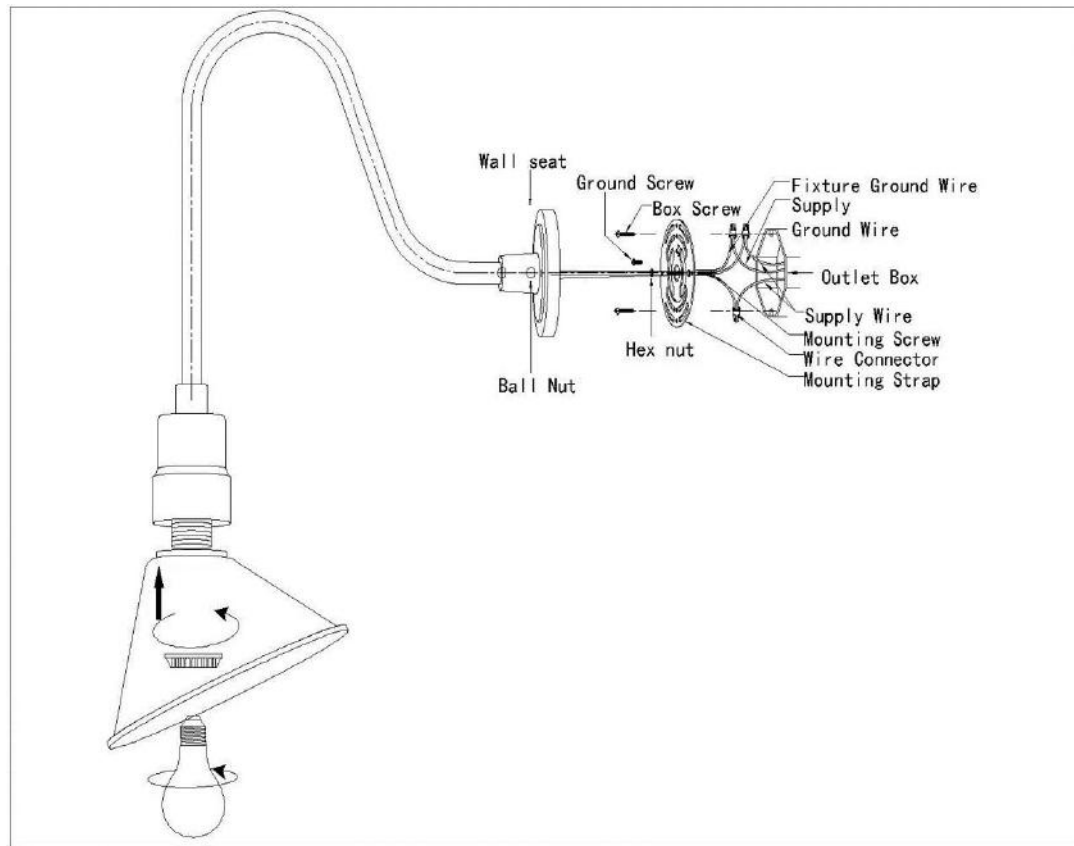

- Step 1: Fix the mounting strap to the outlet box.
 Step 2: Install the gooseneck to the wall seat with the hex nut.
 Step 3: Make the wiring connections with the AC cord accordingly.
 Step 4: Mount the wall seat on the mounting strap with ball nuts.
 Step 5: Fix the lampshade with the black plastic ring.
 Step 6: Insert the bulb to light up, bulb is not included.

Instruction for Correct Use

REMARKS:

- Both indoor and outdoor used.
- When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
- Use the lamp at AC120V/60HZ, overloading will increase the risk of fire.
- Use the right bulb according to the instruction attached. Keep the bulbs away from kids.
- Keep the cord away from heat, oil, sharp edges or moving parts. Damaged cords will increase the risk of electric shock.
- The appliance may in no way be modified or tampered with. Any modification may compromise safety and making the appliance itself dangerous. we declines all responsibility for products that are modified.
- This appliance must be connected to an efficient grounding system in order to work safely and correctly.
- The symbol shown on the device indicates that the product must be disposed of in a different manner than with the urban waste.
- If not familiar with electrical connections, contact a qualified electrician.

CLEANING INSTRUCTIONS

- Use only a soft cloth to clean the appliance, dampened with water and soap or mild cleanser if needed for stubborn dirt.

Warning: do not use alcohol or other solvents.



Base: E26 Max.40W

Voltage: 100-120V 60Hz